


Weighing Scale tutorial

...

Table of content:

- Keyboard layout
- How to load the Label roll
- How to print out labels for weighted and non-weighted items

Keyboard Layout:

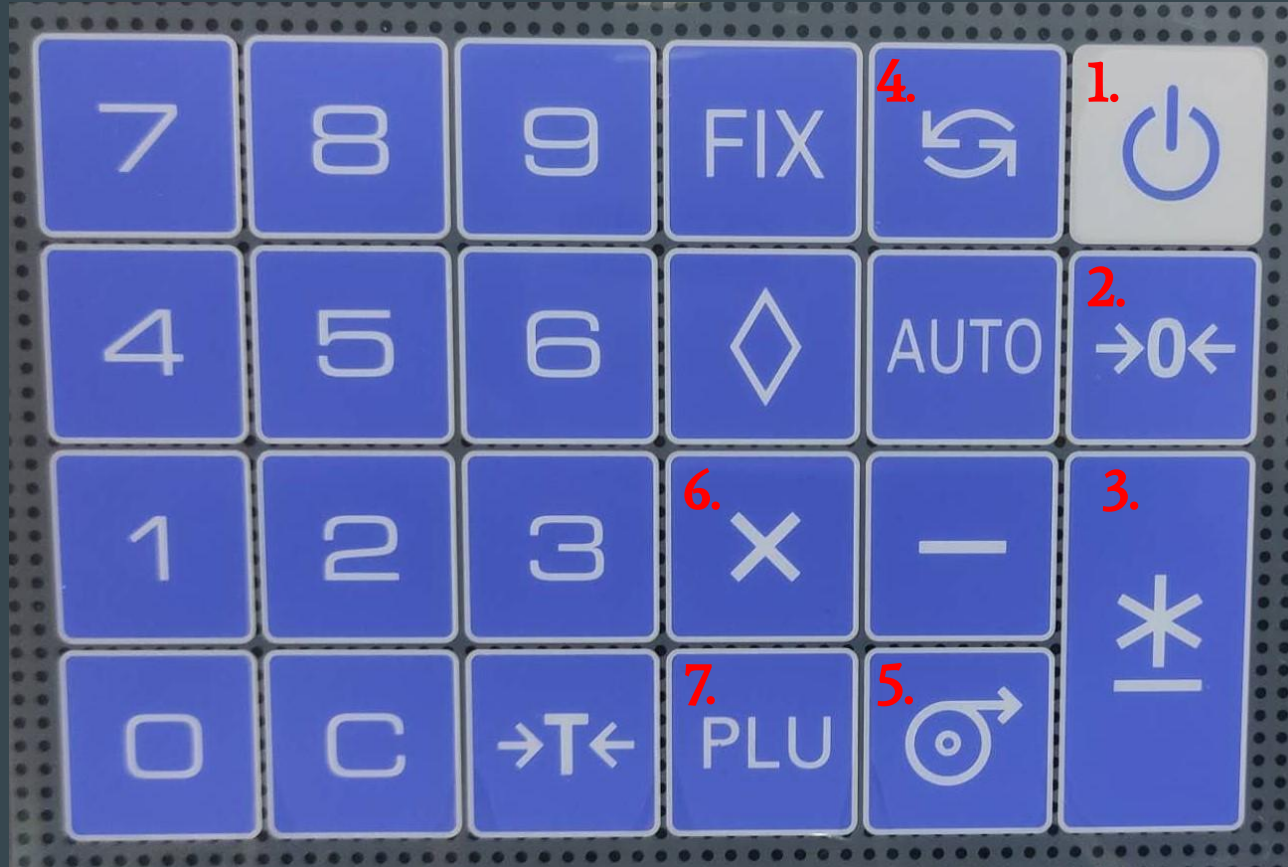


1. Power Button
2. Re-zero Button
3. Enter Button
4. Mode Button
5. Label Feed Button
6. Multiply Button
7. PLU Button


Loading the label roll




Gently pull on the tab to open up the tray to load the label roll

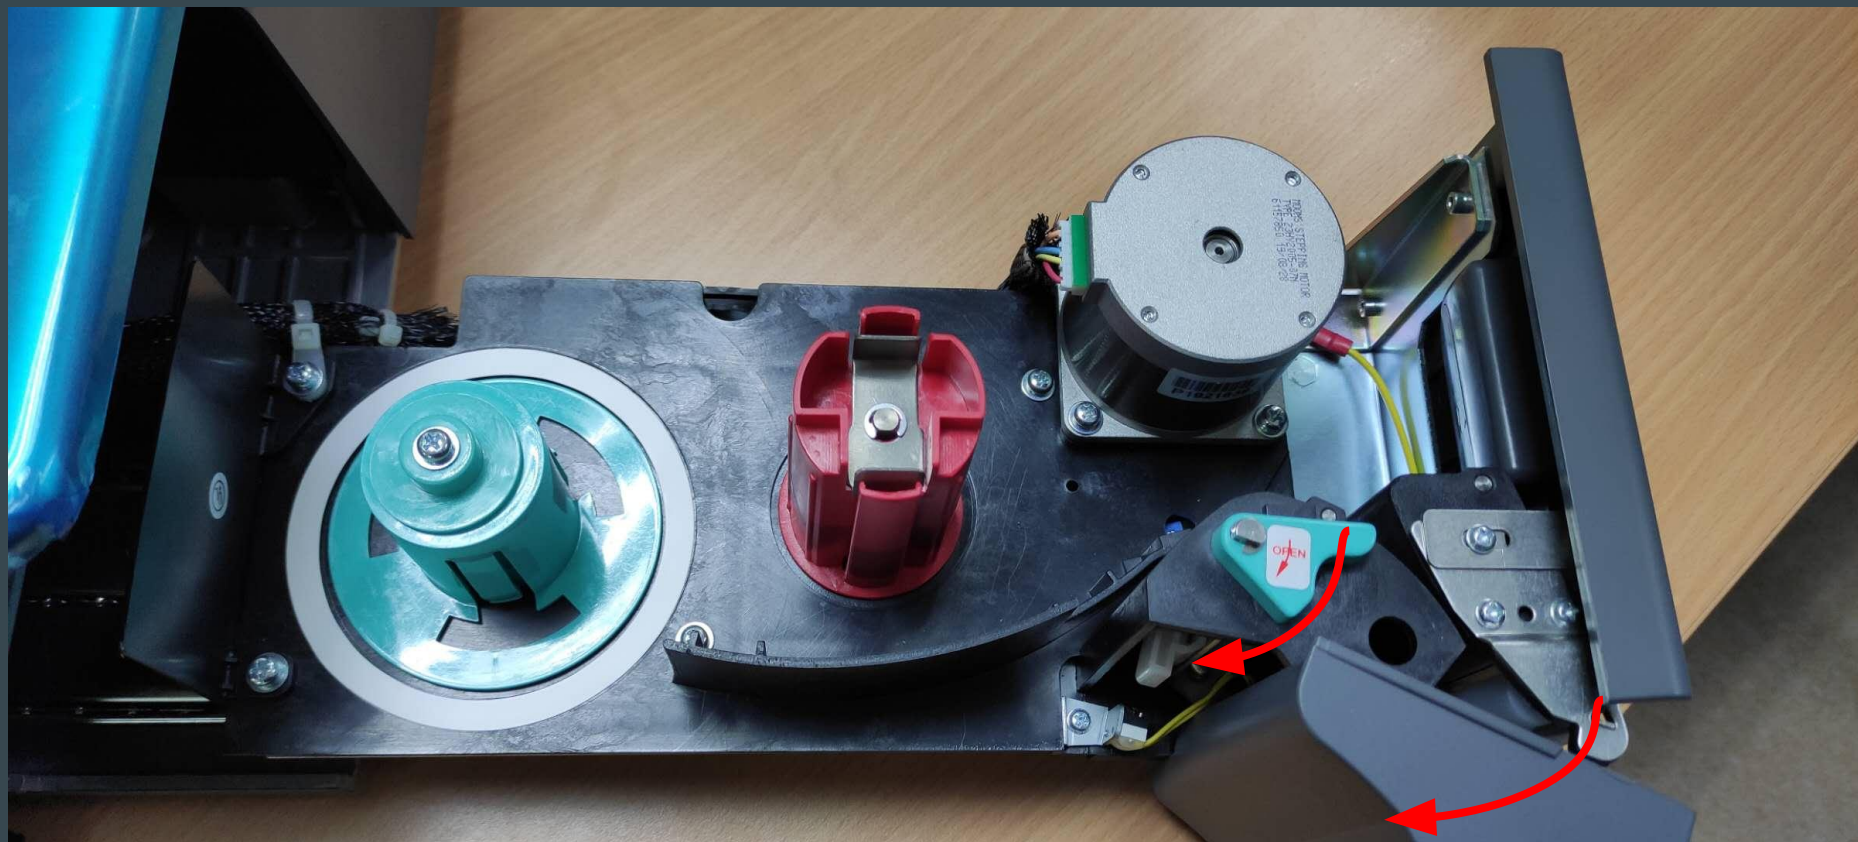


Flip the open switch to open up the bottom panel.

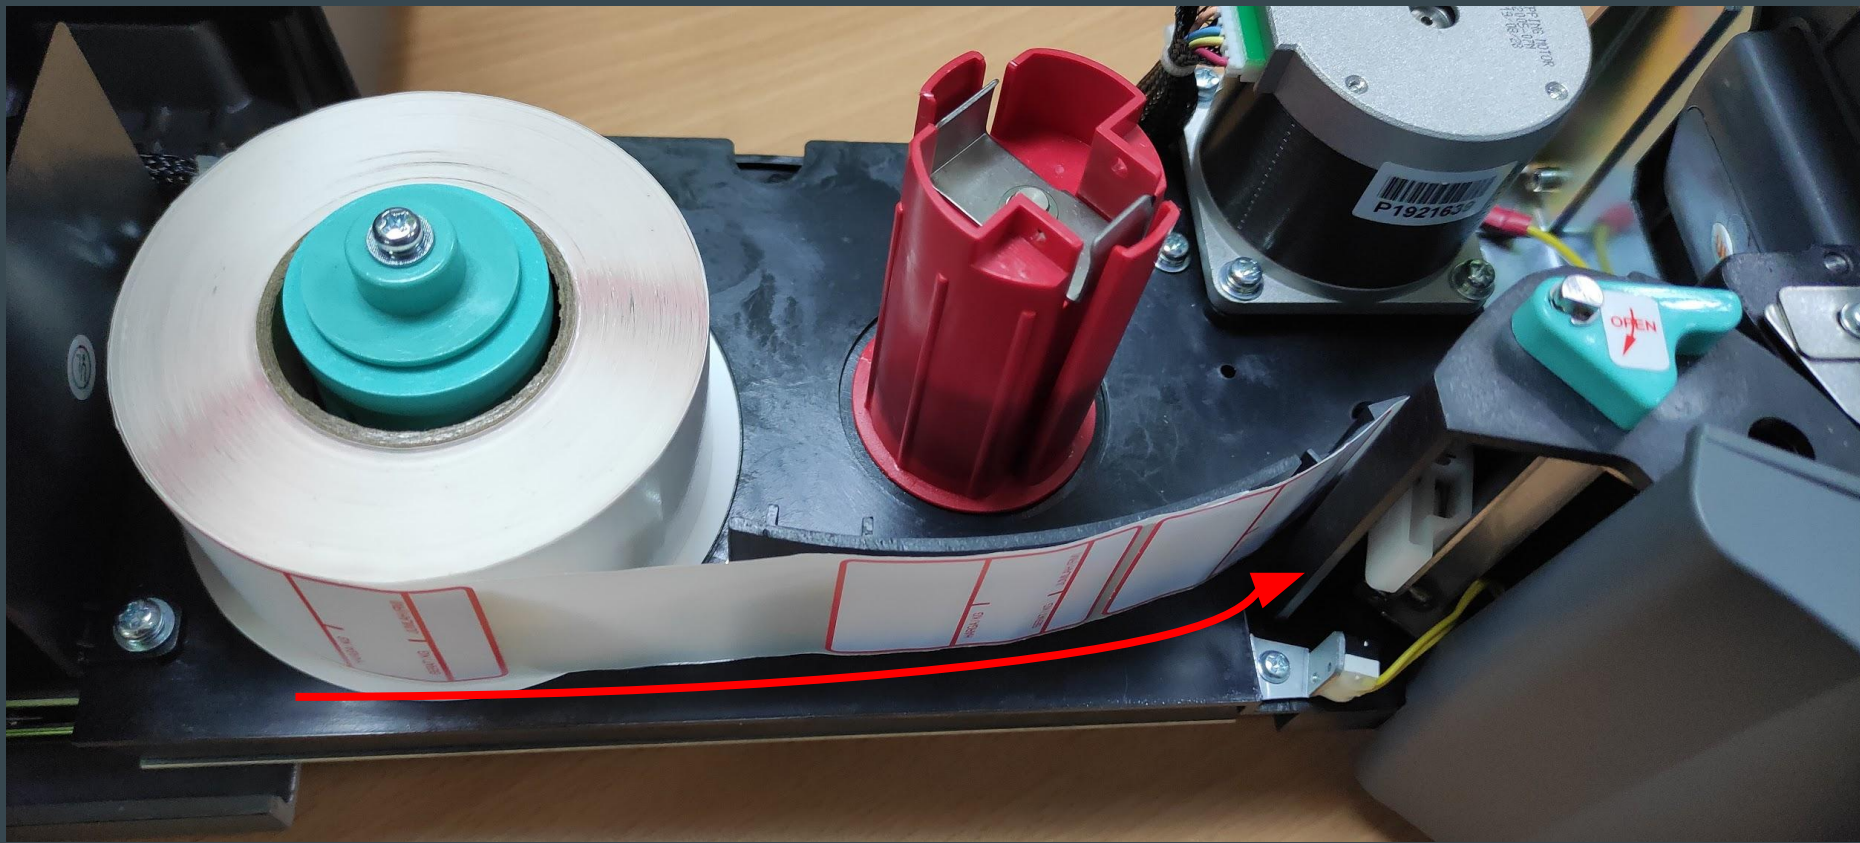


Load in the Label and pull the end of the roll along as shown in the image

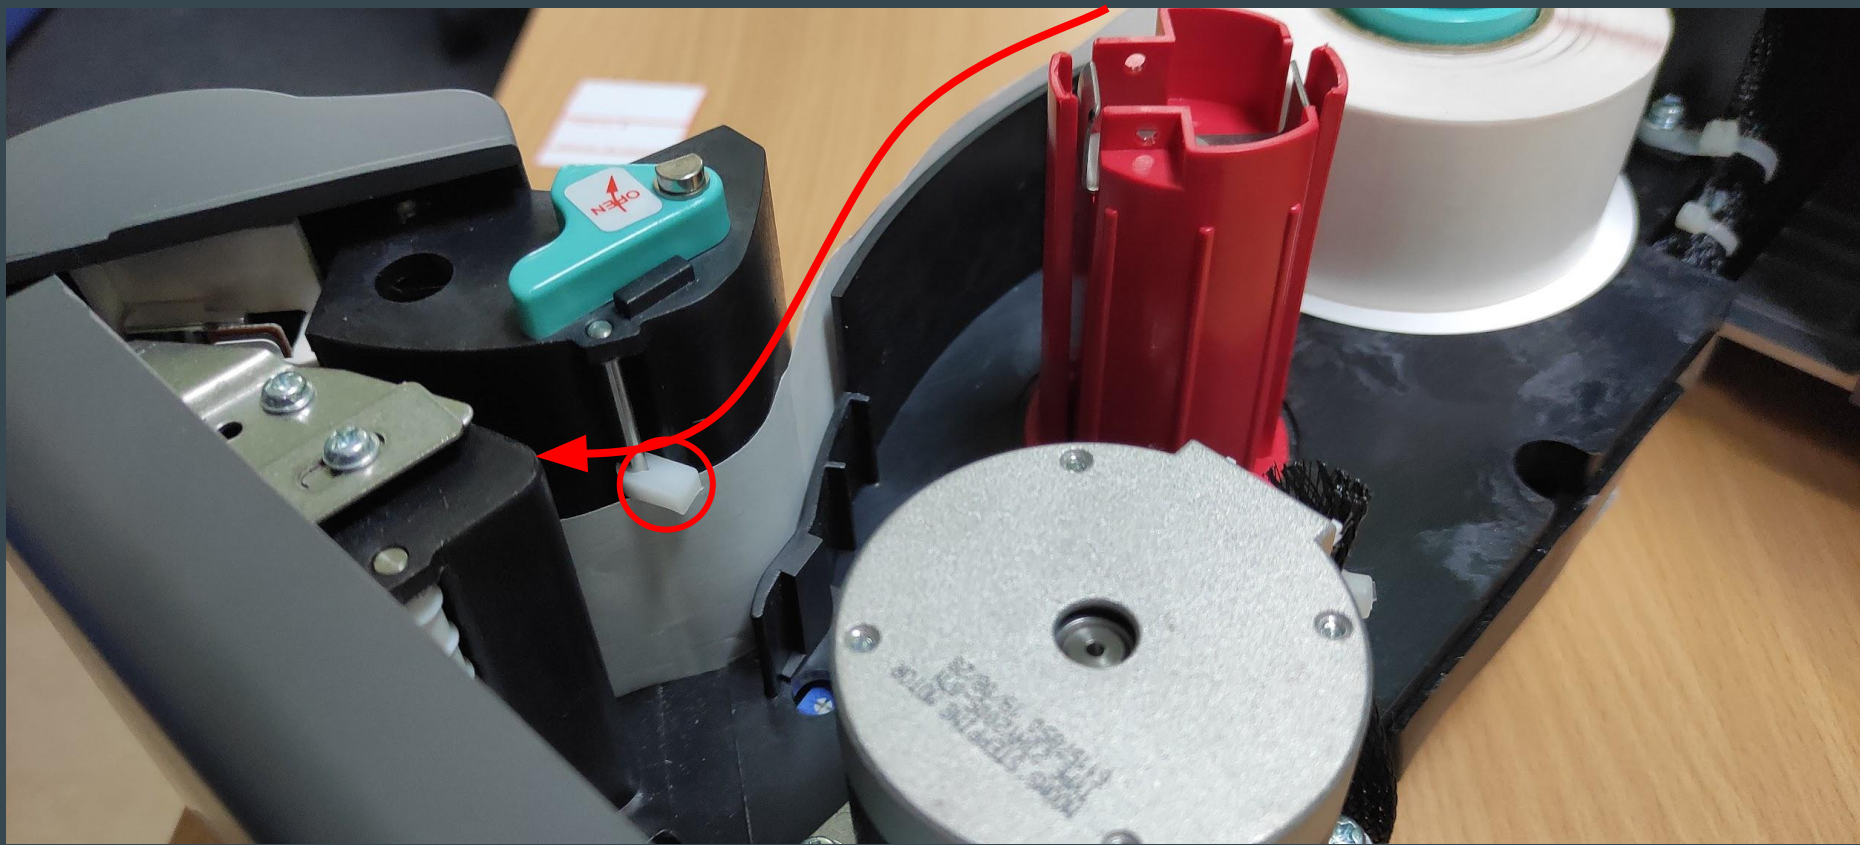

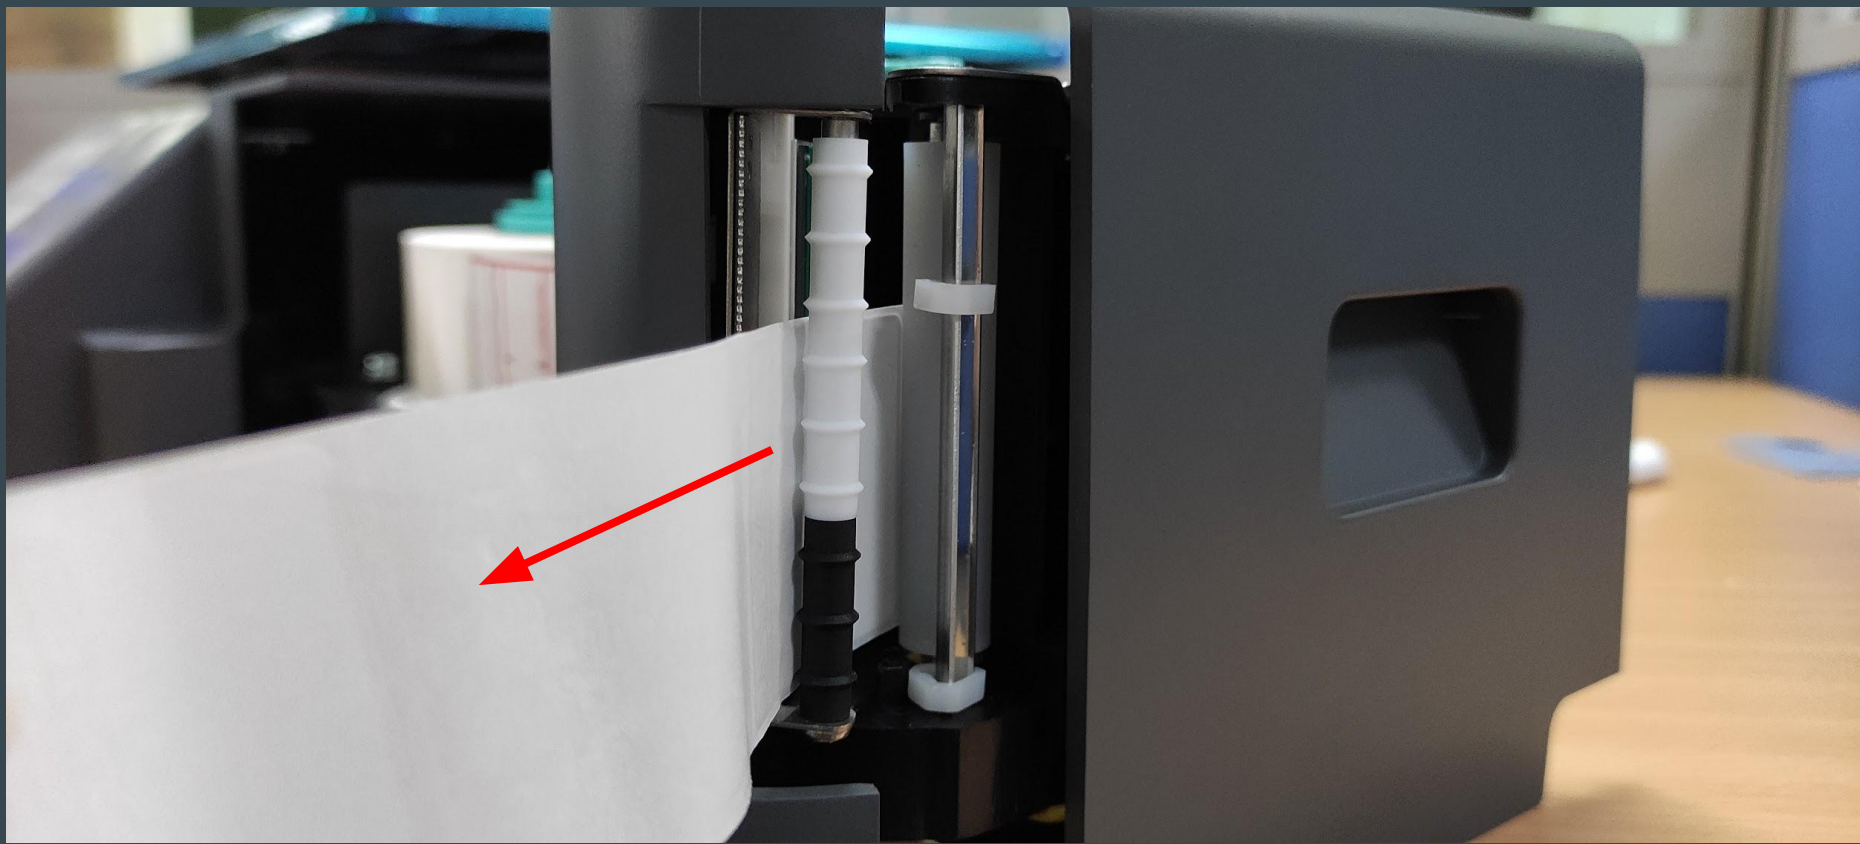






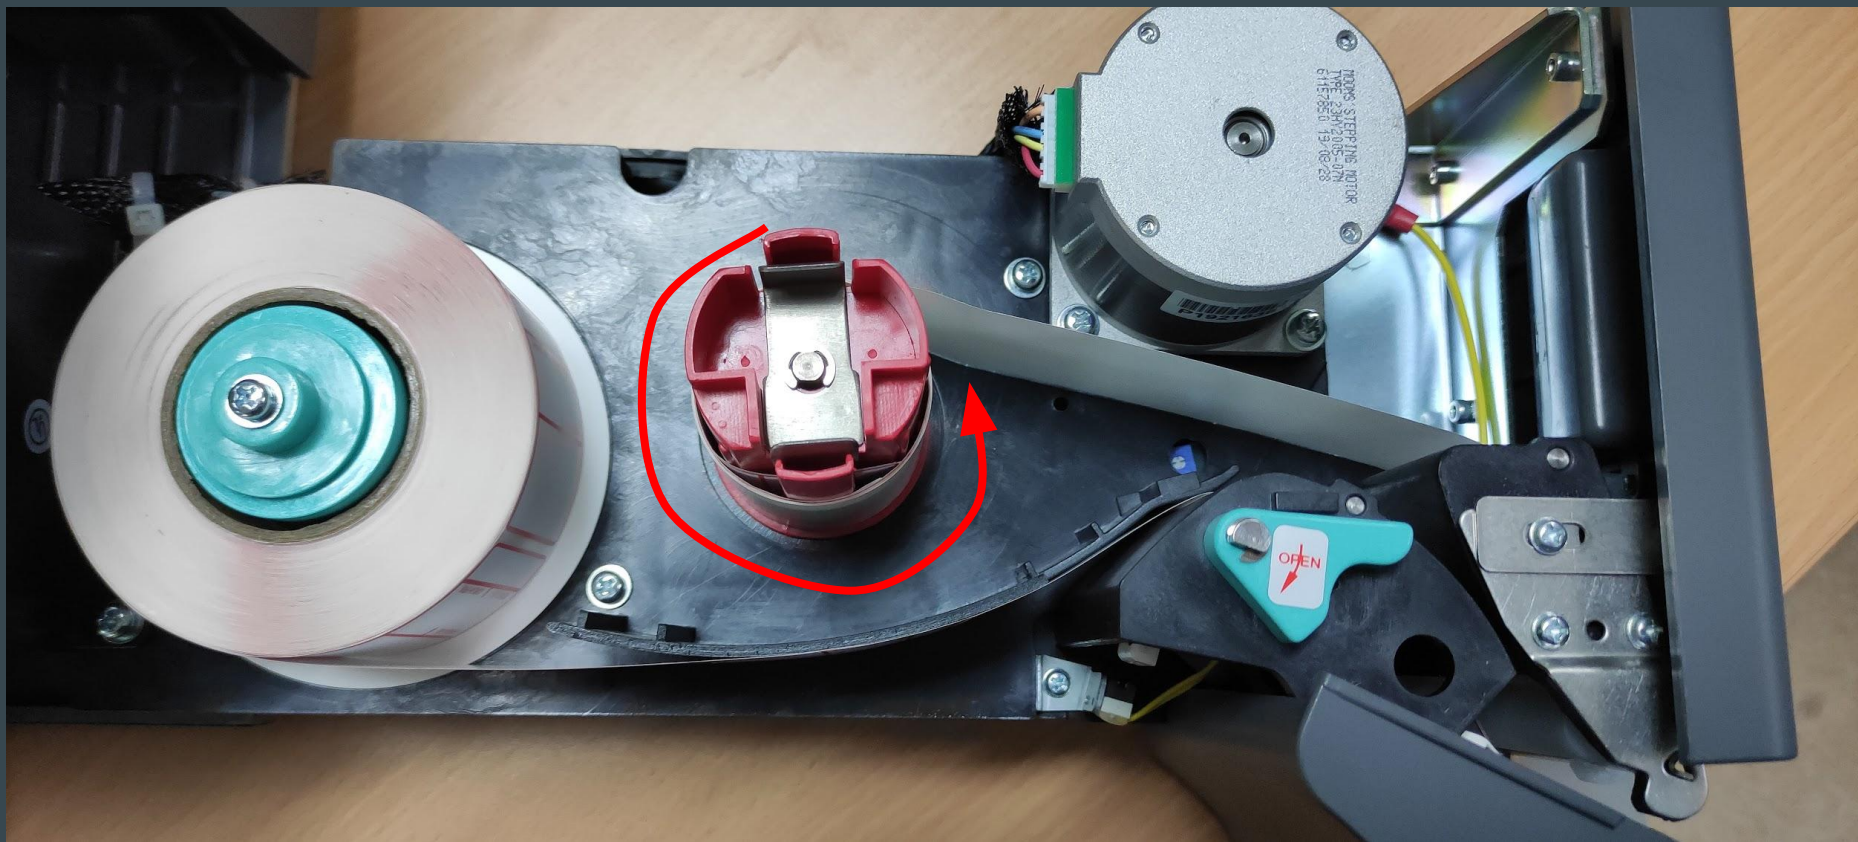



Close the panel shown in the image

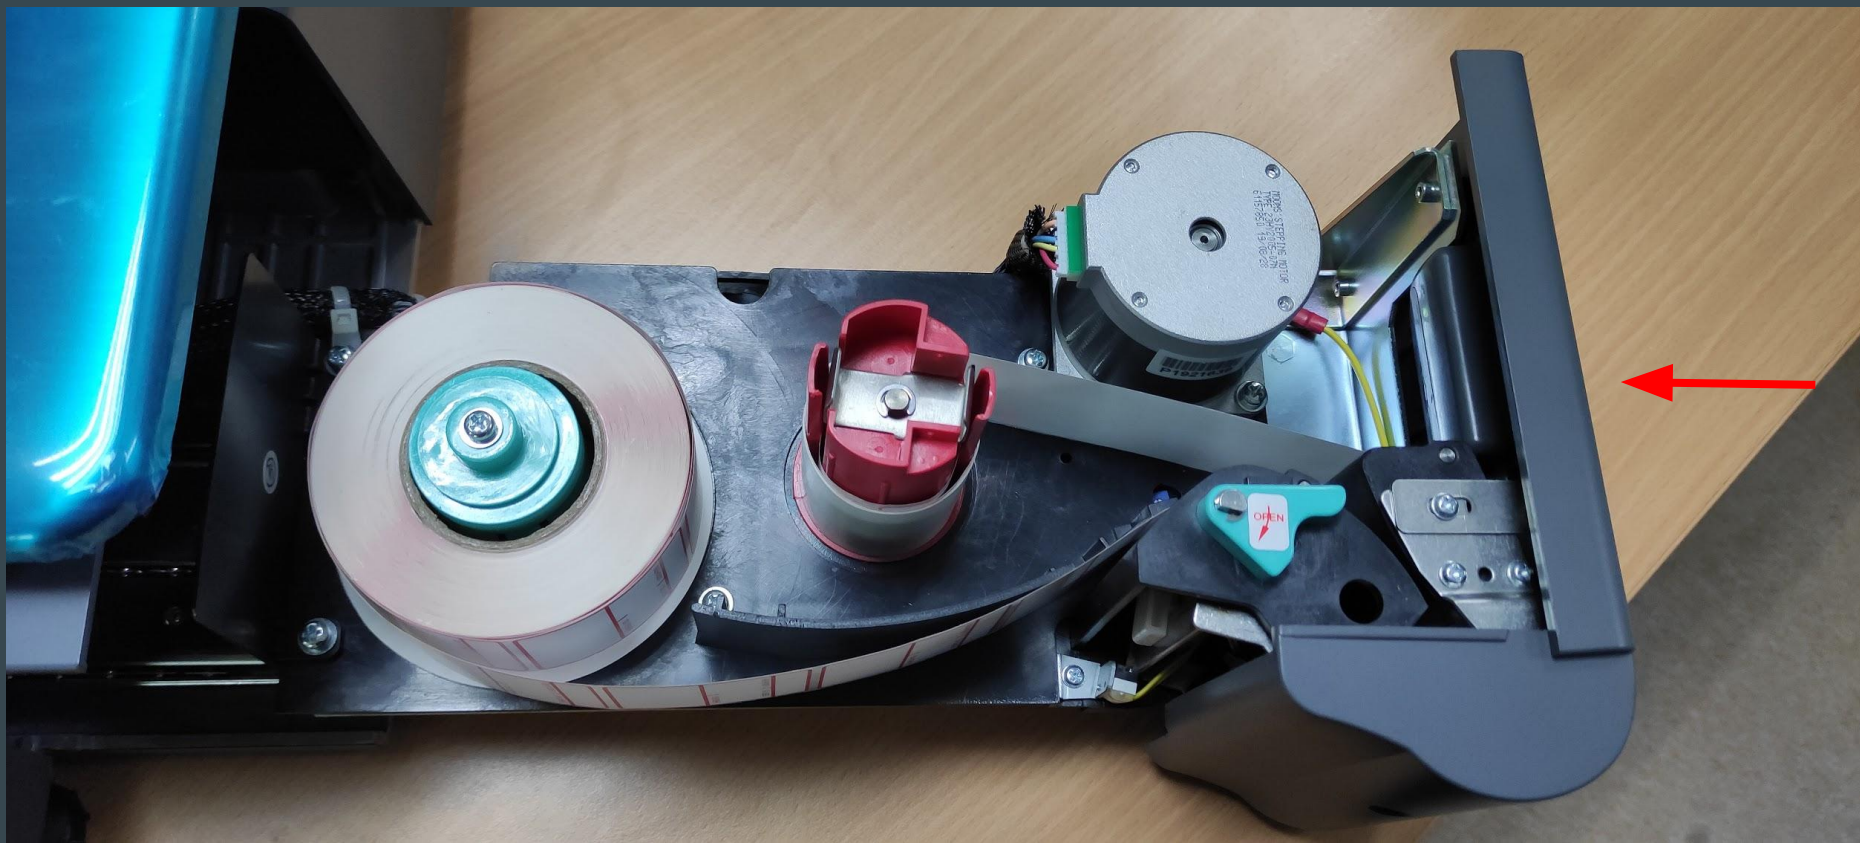

Push the tray back in and you're done

Printing out labels for weighted and
non-weighted items

Weighted items

1. Put the item on the scale
2. Enter the item code on the weighing scale

3. Press the PLU Button

PLU

4. Press Enter



Label Sample:




Non-Weighted items

1. Enter the item code on the weighing scale
2. Press the PLU Button
3. Press Enter

PLU



Label Sample:

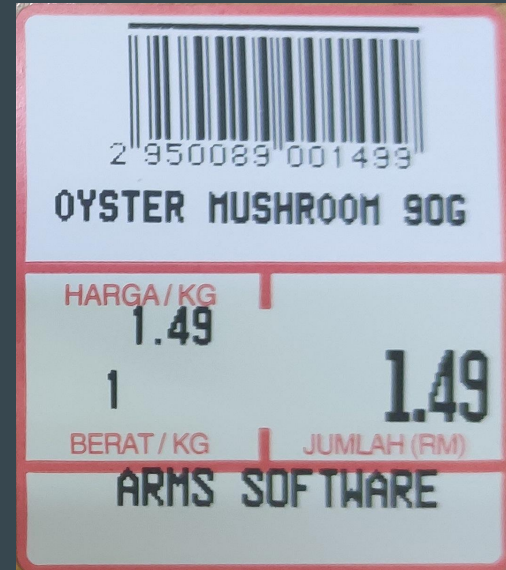

Multiple Non-Weighted items

1. Enter the item code on the weighing scale

2. Press the PLU Button



3. Click the Multiply Button



4. Enter the quantity of the item

5. Press Enter



Please note that the Multiply function only works when its a Non Weighted Item